

Section III. Assembly & Installation Instructions

Extruded Aluminum Conveyor Angle Adjustment (EAF & EAC)



(Fig. K1)



(Fig. K2)



(Fig. K3)



(Fig. K4)

To achieve the many angles of incline on EAF and EAC Conveyors:

1. Loosen leg bracket stop on each side. (Fig. K1)
2. Loosen leg knee brace on each side. (Fig. K2 & K3)
3. Loosen (3) bolts in the leg bracket on each side. (Fig. K4)
4. Raise / lower conveyor to desired height.*
5. Tighten leg bracket bolts.
6. Tighten leg knee brace.
7. Set stop against the bottom of the leg bracket and tighten bolt.

NOTE: Legs should be kept at a 90 degree vertical position for the best support.

*All adjustments must be made while supporting conveyor with overhead hoist or equivalent. Failure to do so could cause damage to the conveyor or bodily harm.